

Quick Start Guide

Canon Legria HF G26

Overview

A LCD Touch Screen

B Battery Slot


C Record Start/Stop Button

D DC Power In

E Lens Barrier Switch

F Memory Card Slots

G Power Switch

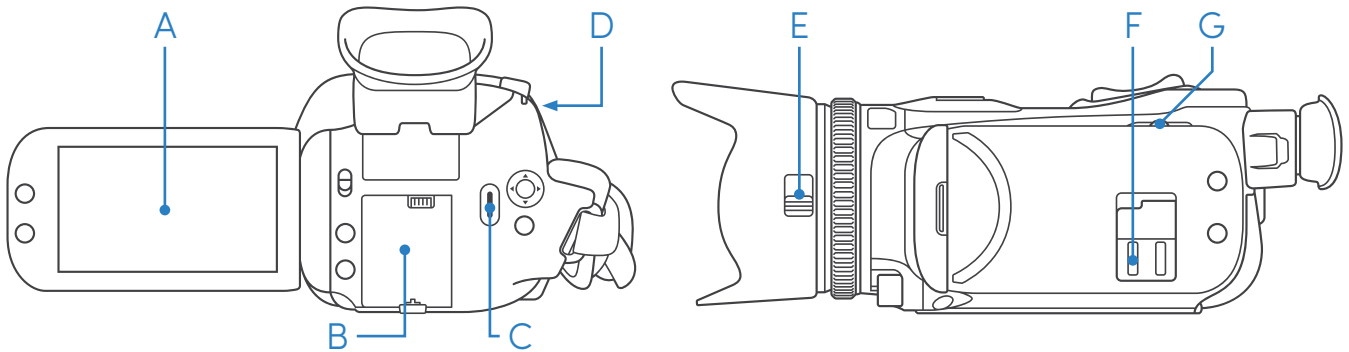

Inserting Memory Card

- Flip open the LCD panel (A)
- Slide memory card slot cover (F) up
- Insert SD Card in slot A and push it all the way in until it clicks in place. It only fits one way.
- Close memory card slot cover

Recording

- Insert a battery into the battery slot (B), or plug in the DC power adapter (underneath rubber flap D)
- Turn on the camera by setting the power switch (G) to "Camera"
- Flip open the lens barrier (E)
- Check your recording settings* on the LCD screen (A)
- Point the camera in the right direction
- Press the record button (C) to start/stop recording

Shutdown

- Wait until "Access" indicator LED (above D) is off
- Turn power switch to "Off"
- Close LCD panel (A)
- Close lens barrier (E)

Transfer Video Files to PC/Mac

- Using SD card reader: With the camera off, open the memory card slot cover (F) and gently push your SD card in to release.
- Via USB: Connect the camera via mini-USB cable (port located on front right side of the camera) Turn the camera on with the power switch (G) set to "Media".

Charging the Battery

- With the camera off, insert the battery (B) and DC power adapter (D)
- The "Power/Chg" LED will turn off when charging is complete

*Recommended Recording Settings

For basic participant observation, the Technical Support Group recommends the following:

- Activate "Auto" mode (switch on top of the camera, next to the zoom rocker)
- The recording mode and format should be set to "25.00P 4Mbps MP4", displayed in the top right of the LCD touch screen. If this is not the case:
- Tap "Func" button on the screen, then "Menu".
Select the second tab
Select "Movie Format" and set to MP4
Select "Recording Mode" and set to 4Mbps

Note: The 4Mbps recording mode automatically sets the frame rate to 25 fps and the resolution to 1280*720 pixels (720p)

Warning

- Do not insert or remove memory cards while the camera is on
- Always close the lens barrier when the camera is not in use.